

邮件报警功能简介

邮件报警功能简介：

现场实时报警，电子邮件通知用户

- 描述触发信息（预定义信息与变量信息）
- 附带事件日志截图，报警信息更易掌握

配方、采样数据、操作与事件记录，可通过电子邮件备份到指定邮箱

适用条件：


适用产品： iE 系列（带网口）、eMT 系列、cMT-HD\cMT-SVR\cMT3090\cMT3151 等等。

软件版本： EB Pro V5.06.01 或更新版本。


OS 版本号： 20140328 或更新版本。

操作步骤：

步骤一、确认邮件报警的联系人、邮件发送服务器及端口

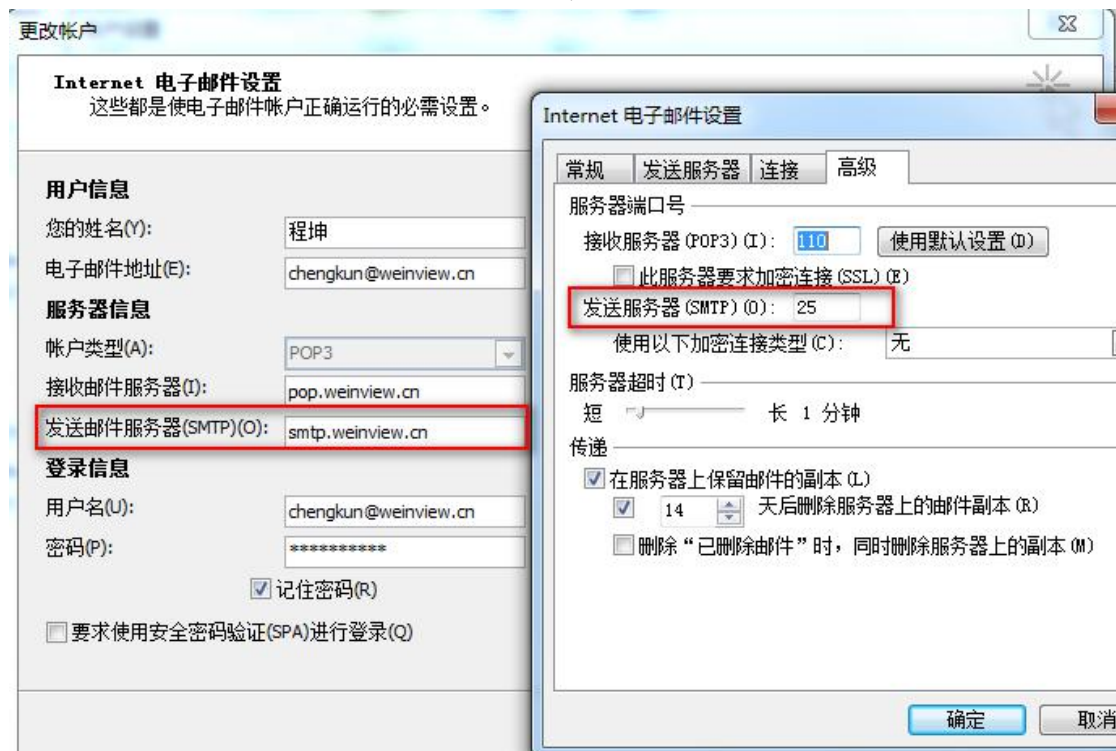

启用邮件报警功能，并填写邮件报警人相关信息，如下图所示：

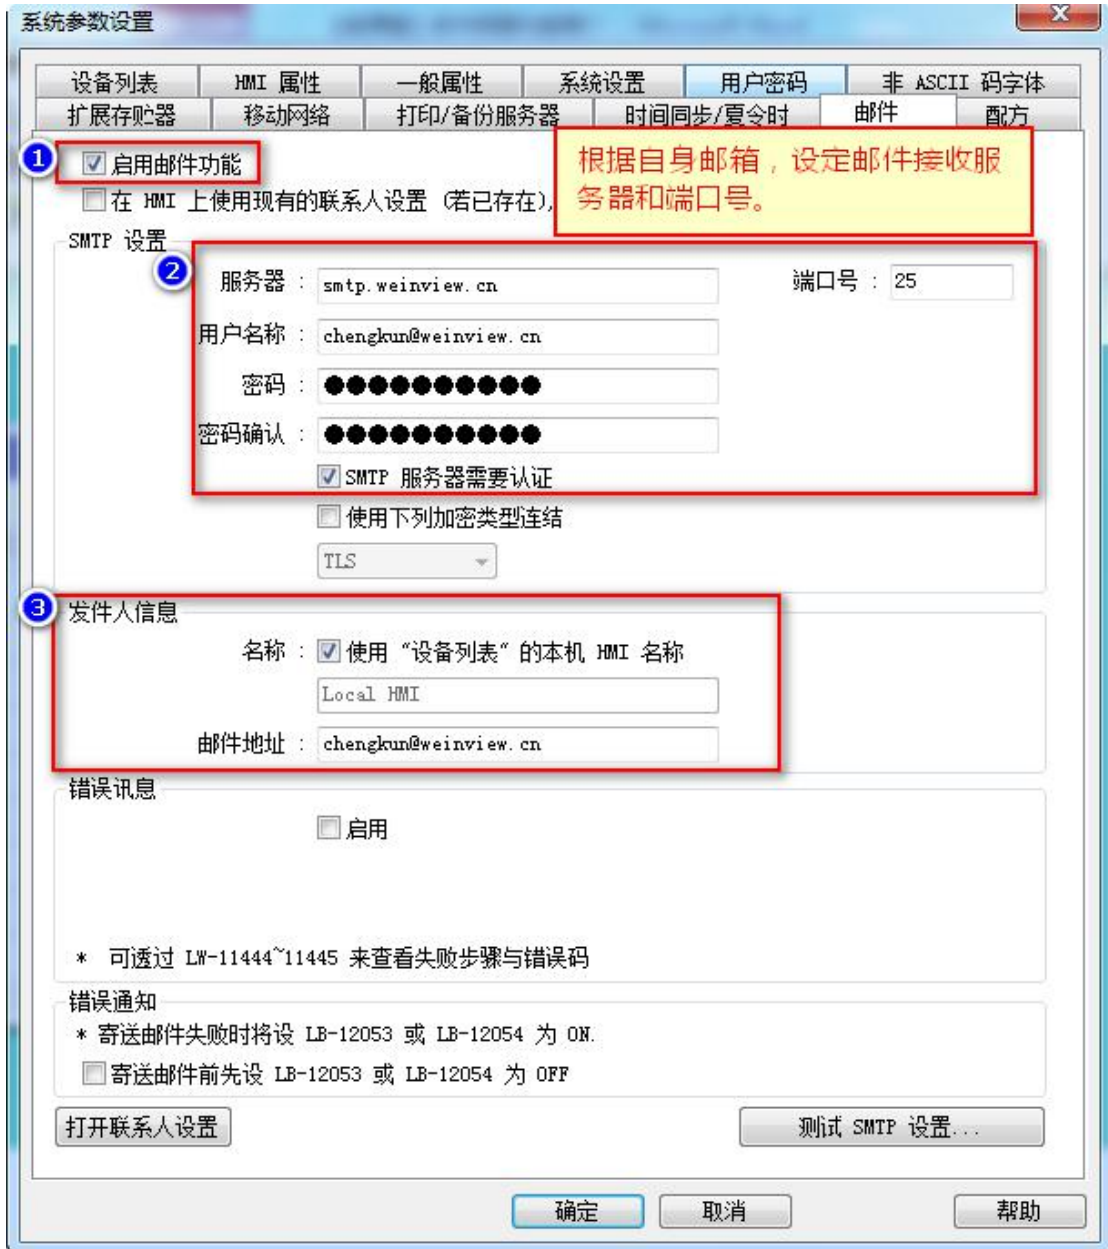

1

启用邮件功能

在 HMI 上使用现有的联系人设置 (若已存在)

根据自身邮箱，设定邮件接收服务器和端口号。

SMTP 设置

2

服务器 : smtp.weinview.cn 端口号 : 25

用户名称 : chengkun@weinview.cn

密码 : ●●●●●●●●●●

密码确认 : ●●●●●●●●●●

SMTP 服务器需要认证

使用下列加密类型连结

TLS

3

发件人信息

名称 : 使用“设备列表”的本机 HMI 名称

Local HMI

邮件地址 : chengkun@weinview.cn

错误讯息

启用

* 可透过 LW-11444~11445 来查看失败步骤与错误码

错误通知

* 寄送邮件失败时将设 LB-12053 或 LB-12054 为 ON

寄送邮件前先设 LB-12053 或 LB-12054 为 OFF

打开联系人设置

测试 SMTP 设置...

确定

取消

帮助

步骤 2、添加邮件报警联系人邮箱，然后添加群组，如下图所示：



步骤 3、新增报警事件登录类型、报警地址及触发条件，如下图所示：

报警 (事件) 登录

一般属性 信息 e-Mail 统计

类别 : 0 等级 : 低

1 地址类型 : 位 字

HMI 重置时监视事件的延迟时间 : 1 秒

2 读取地址

PLC 名称 : Siemens S7-200 PPI 设置...

地址 : M 0.0

通知

启用

3 触发条件

触发 : OFF->ON

确定 取消 帮助

报警事件登录的 email 的相关参数设置，如下图所示：


The screenshot shows a dialog box titled "报警 (事件) 登录" (Alarm (Event) Login) with a close button in the top right corner. The dialog has four tabs: "一般属性" (General Properties), "信息" (Information), "e-Mail", and "统计" (Statistics). The "e-Mail" tab is selected and contains the following sections:

- 启用 (Enabled):** A table with columns for "启用" (Enabled), "触发条件" (Trigger Condition), and "收件人" (Recipient).

启用	触发条件	收件人
<input checked="" type="checkbox"/>	事件触发时寄出	群组 A
<input type="checkbox"/>	事件清除时寄出	
- 收件人 (Recipient):** A text input field containing "收件人..." and "群组 A". Below it are buttons for "抄送..." (Cc) and "密件抄送..." (Bcc).
- 主题 (Subject):** A checkbox labeled "使用事件内容做为主题" (Use event content as subject) is checked. Below it is a text input field for the subject, containing "设备报警".
- 讯息 (Message):** Two text input fields for "抬头:" (Header) and "结尾:" (Footer). Each has a "使用文字库" (Use text library) checkbox, which is currently unchecked.
- 附件 (Attachment):** A checkbox labeled "包含窗口屏幕截图画面" (Include window screenshot) is checked. Below it is a dropdown menu showing "10. 邮件报警功能".

At the bottom of the dialog are three buttons: "确定" (OK), "取消" (Cancel), and "帮助" (Help). There are also four blue circular callouts with numbers 1, 2, 3, and 4, each pointing to a specific configuration element in the dialog.

步骤 4.报警触发，收到报警信息邮件，如下图所示：

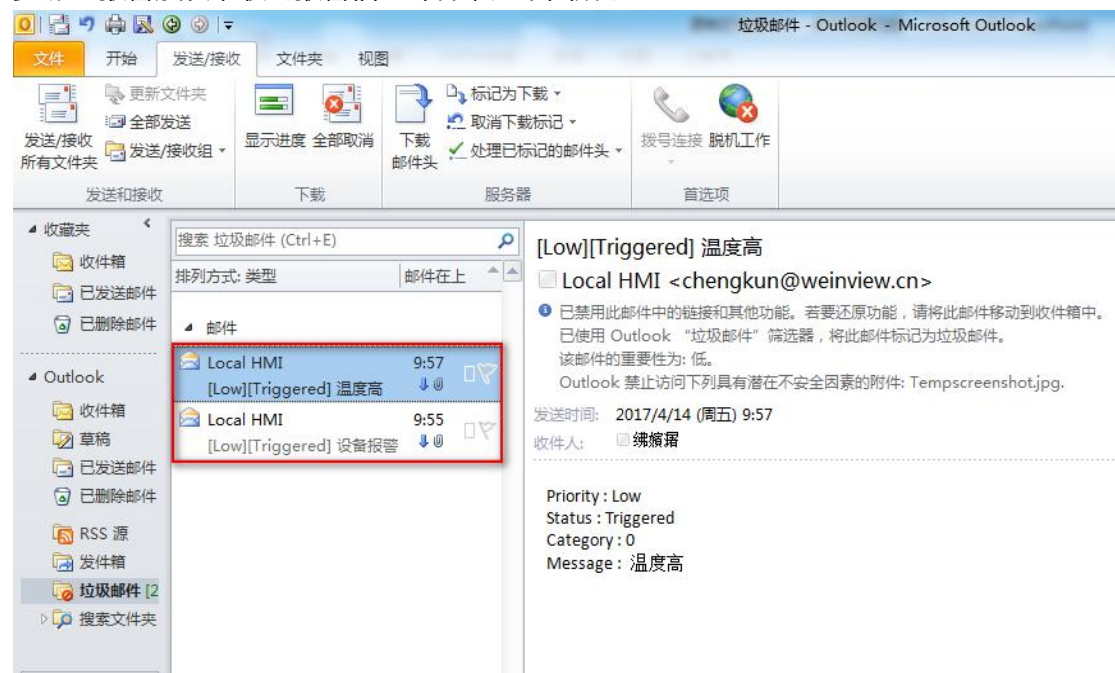

以上就是邮件报警功能的操作步骤，赶紧试试吧 !!!